


At a glance **Kiox**

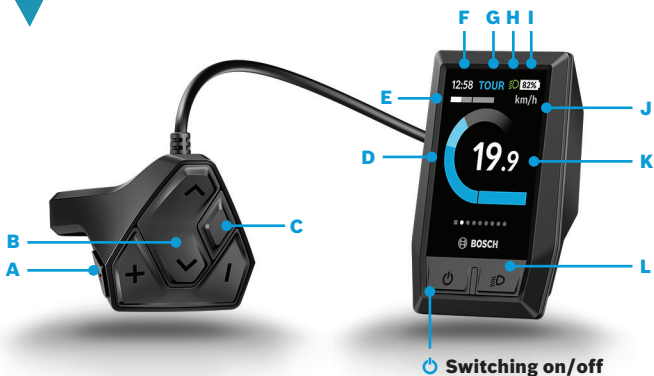

BOSCH
Invented for life



Use **+** / **-** buttons to select one of four assisted riding modes.

- Eco** Efficient support for maximum range
- Tour** Consistent support for longer rides
- Tour+*** Continuous support for energy-saving rides
- Sport** Powerful support for all types of riding
- eMTB**** Dynamic support for a natural feel
- Turbo** Maximum support for challenging rides

Functions

- A** Activate Walk Assist
Press Walk assist and hold **+**
- B** Arrow buttons: toggle between screens & settings
- C** Select button
- D** Rider's effort & motor assist
- E** Current speed compared to average speed
- F** Time or speed
- G** Current riding mode
- H** Bicycle light switched on
- I** Battery charge level
- J** eShift (optional)
- K** Current speed
- L** Switch lights on/off

📍 Navigation 👤 Personalization 📶 Fitness data tracking

Expand your riding options with the eBike Connect app and the eBike Connect portal.

Visit **ebike-connect.com** to learn more.



*Contact your local dealer to find out whether your eBike can be updated with Tour+ mode. **The eMTB mode replaces the Sport mode on eBikes with the Performance Line and the Performance Line CX drive units.