

At a glance Purion



BOSCH
Invented for life



Use **+** / **-** buttons to select one of four assisted riding modes.

- Eco** Efficient support for maximum range
- Tour** Consistent support for longer rides
- Tour+*** Continuous support for energy-saving rides
- Sport** Powerful support for all types of riding
- eMTB**** Dynamic support for a natural feel
- Turbo** Maximum support for challenging rides

Functions

Switch lights on/off

3 sec. **+** press

Display trip distance,
total distance or range

2 sec. **-** press

Reset the trip distance

3 sec. **+** **-** press

Change mph ↔ km/h

Hold **-** and press **+**

Activate Walk assist

Press Walk assist and hold **+**

A Light indicator

B Battery charge level

C Walk assist

D Range

E Current speed

*Contact your local dealer to find out whether your eBike can be updated with Tour+ mode. **The eMTB mode replaces the Sport mode on eBikes with the Performance Line and the Performance Line CX drive units.

