🕕 UP

**DOWN** 

## **LED MULTI**

Control with Minimalist Design

76% - 100%

51% - 75%

26% - 50%

1% -25%

#### **BATTERY LEVEL**

#### SUPPORT LEVEL

Press • UP / • DOWN to switch levels.

SPORT

TOUR

ECO

OFF

**ON/OFF** 

**ON**: Short Press **OFF**: Long Press

#### SYSTEM STATUS

**Normal** 

App Connected

Alert / Reminder

\* WALK ASSIST: Long Press - DOWN to Unlock, then Hold + UP.

APP CONNECT: Double Click (1) ON/OFF.

### ■ LIGHT ON/OFF: Long Press ⊕ UP.

# **SMARTLY CONNECT YOUR E-BIKE**












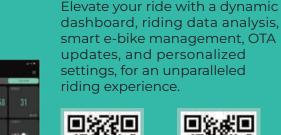

Download Hyena Rider Assistant.





**Android** 

iOS