LED CHIP 2

Design For the Purest Cycling



ON: Short Press **OFF**: Long Press





Press • UP / • DOWN to switch levels.

SPORT

TOUR

■■■ ECO

OFF

SUPPORT LEVEL

BATTERY LEVEL

•••••• 81% - 100%

••••• 61% - 80%

41% - 60%

21% - 40%

••••• 11% - 20%

< 10%

SYSTEM STATUS

Normal

App Connected

Alert / Reminder

■ LIGHT ON/OFF: Long Press **+ UP.**

* WALK ASSIST: Long Press - DOWN to Unlock, then Hold - UP.

APP CONNECT: Double Click (ON/OFF.

SMARTLY CONNECT YOUR E-BIKE







 












Download Hyena Rider Assistant.



iOS